

Connection assignment for housing with series terminal

Level contact - break / make 01/ 03.

Level contact - changeover 02 / 04.

Level contact - in combination with thermal contact.

Level contact - in combination with Pt 100 two wire.

serial No. Date

IN-GB- 001a 02/18

Contact function - Tank empty.

